CRESTRON

MPC3-302

COMPUTER
USB
LAN

4. **Ensure web conference software / application has the correct devices selected for the camera, microphones, and speakers, as shown below:**

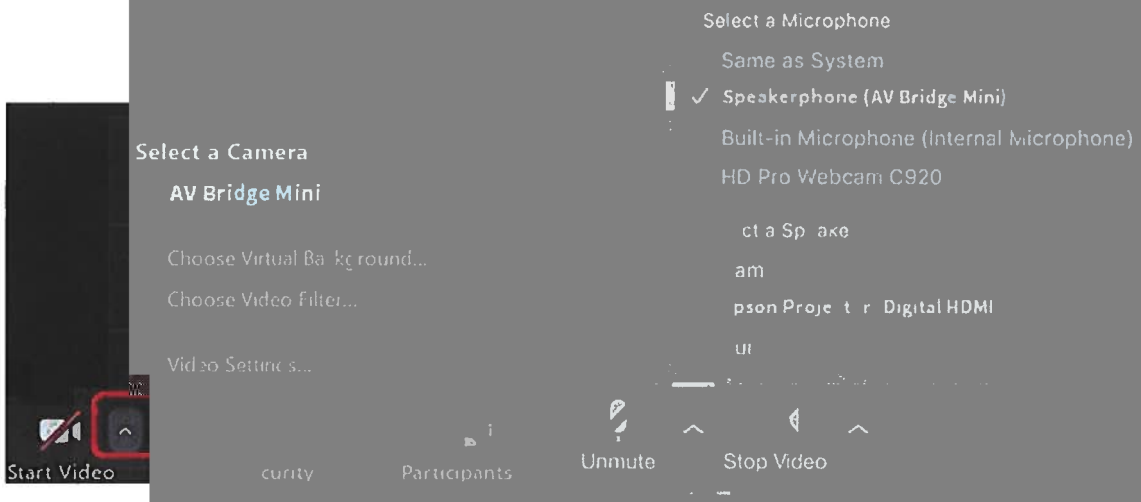

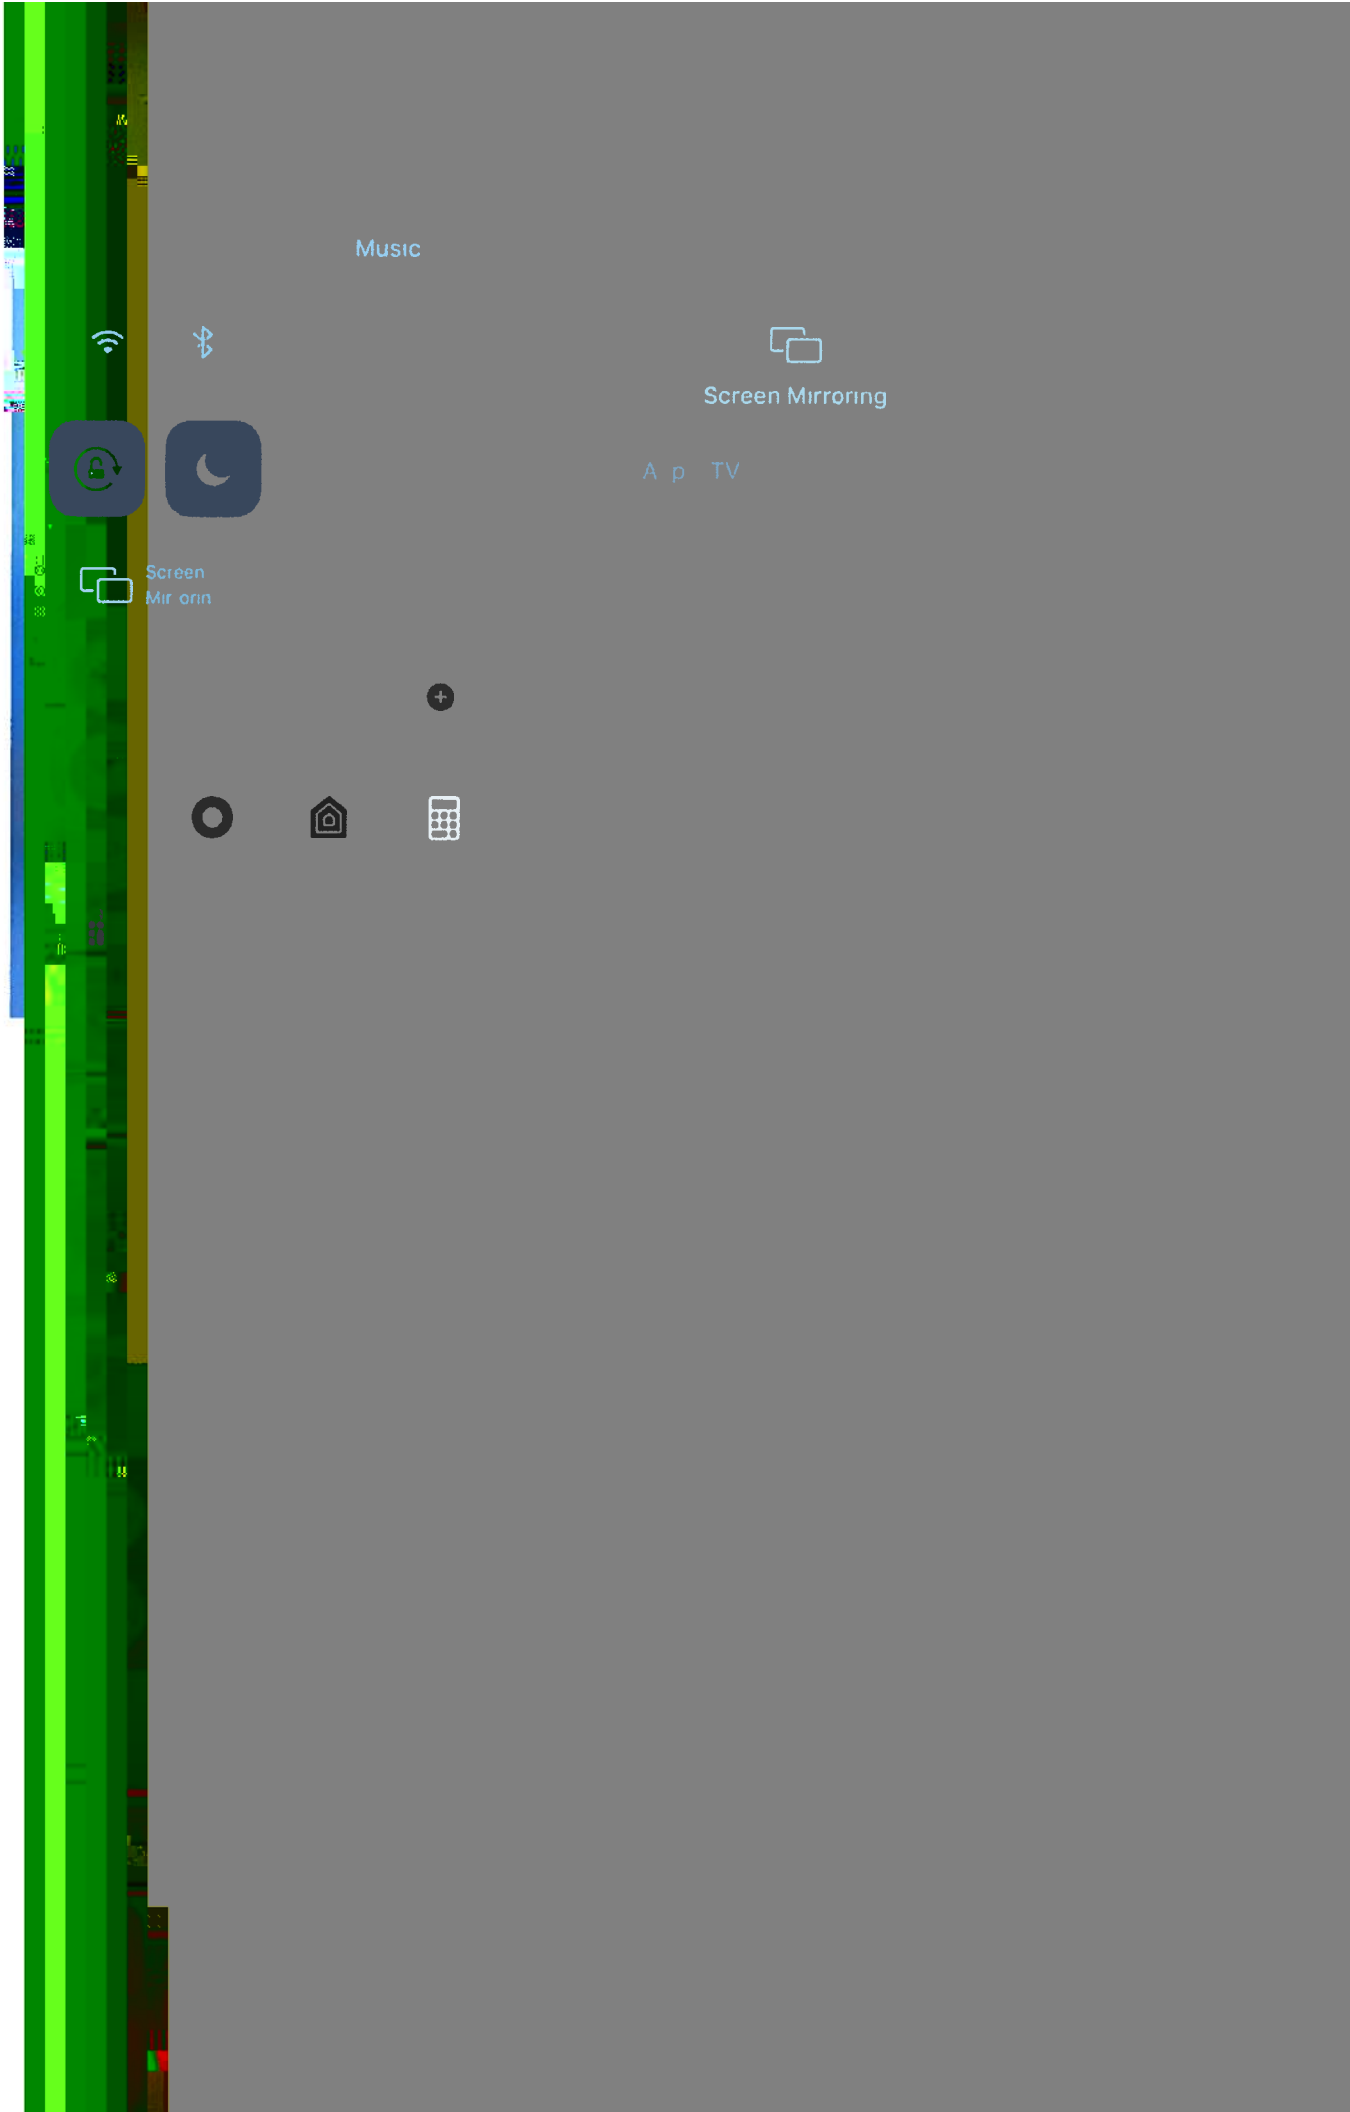
Music
Screen Mirroring
A p TV
Screen
Mir orin

Related concepts

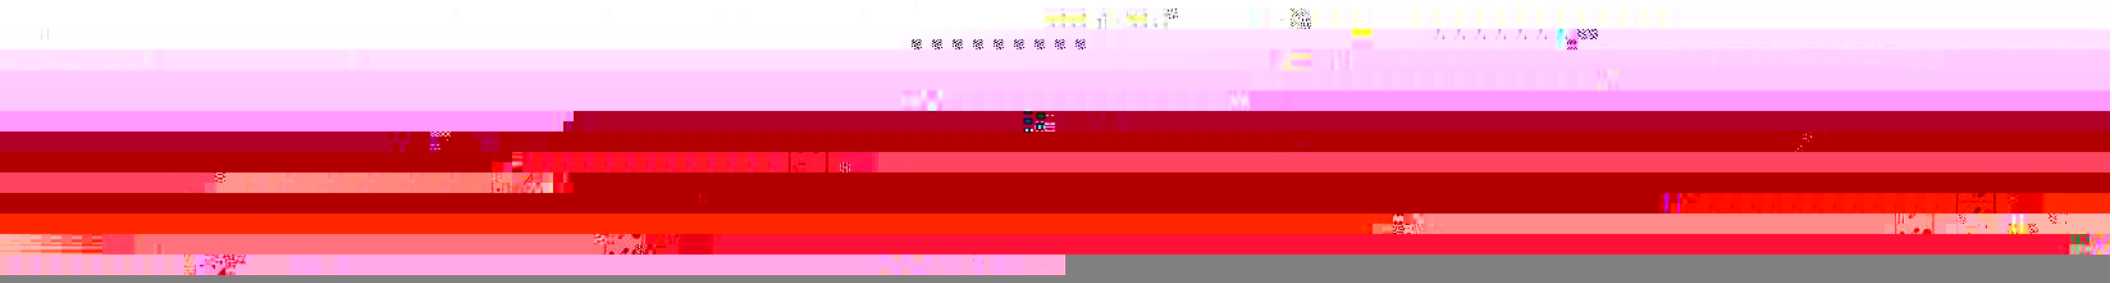

3. To close the main toolbar, select the icon at the bottom of the toolbar.

Note: If you want to hide the toolbar automatically after drawing, select the icon at the bottom of the toolbar.

I t lb l t th arrow.

' D` I

Interactive Modes

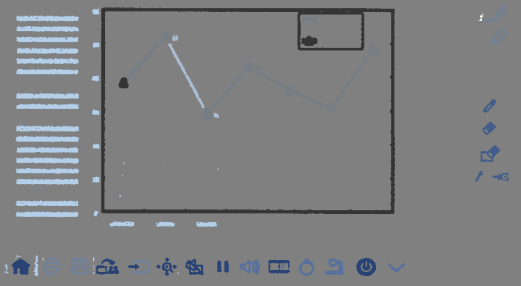

Us·

Parent topic:

Using the Pens

Your projector came with a blue pen and an orange pen, identified by the color on the end of the pen. You can use either pen, or both pens at the same time (one of each color), with Easy Interactive Tools.

Make sure the pen batteries are installed.

Note: The pen turns off automatica

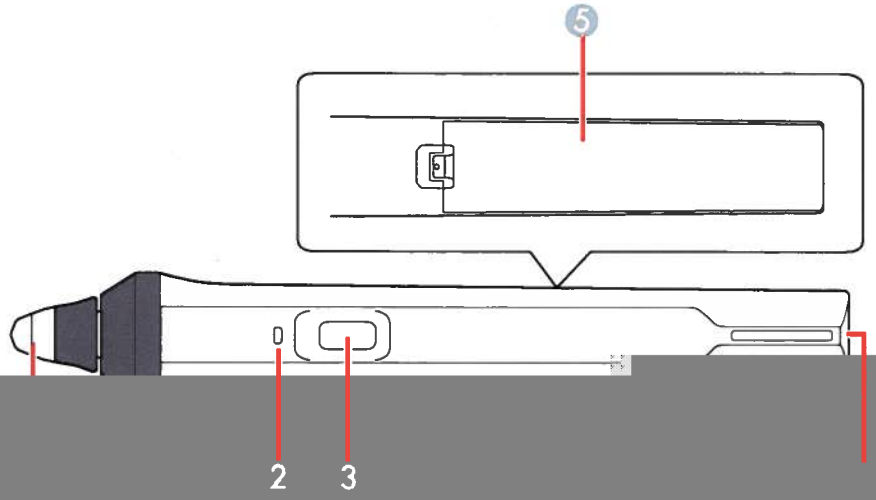

ll ft d l ct the icon at the bottom of the

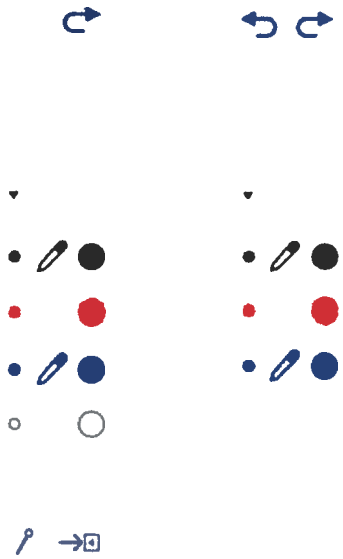

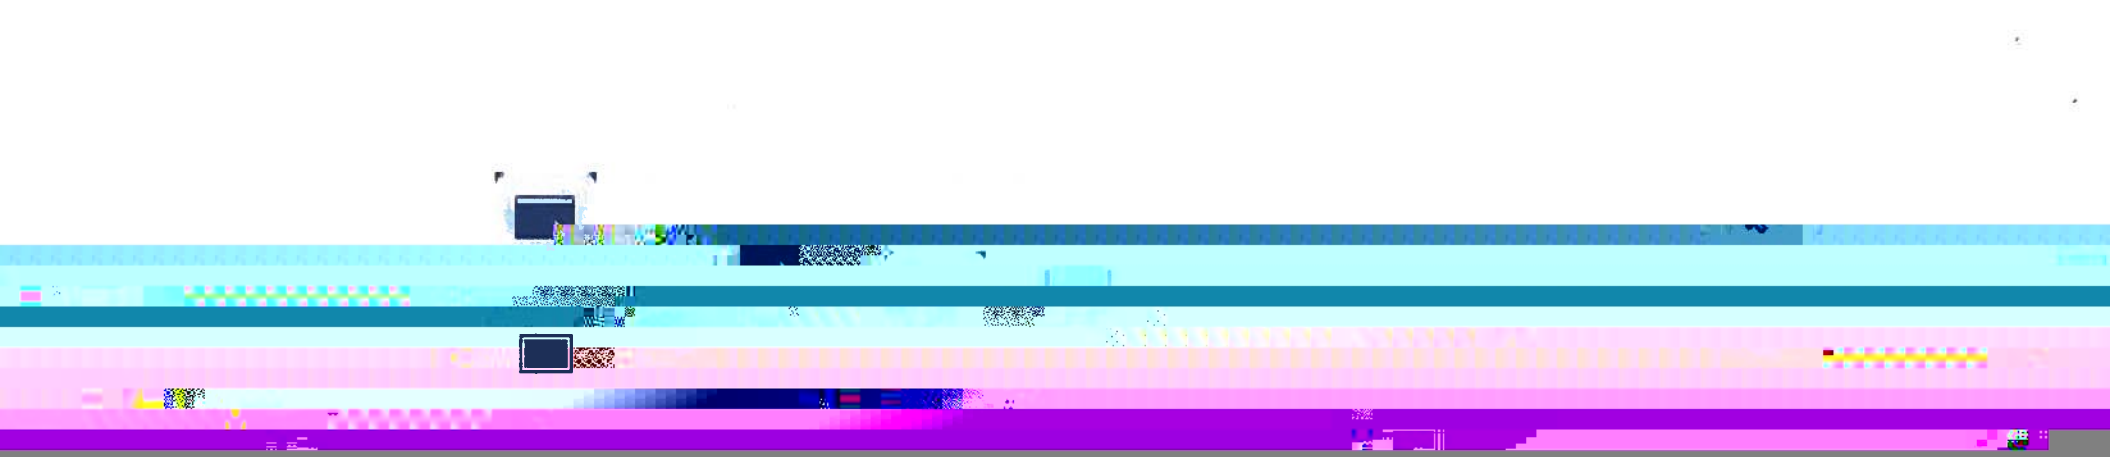



Using BrightLink Without a Computer

Using BrightLink Without a Computer

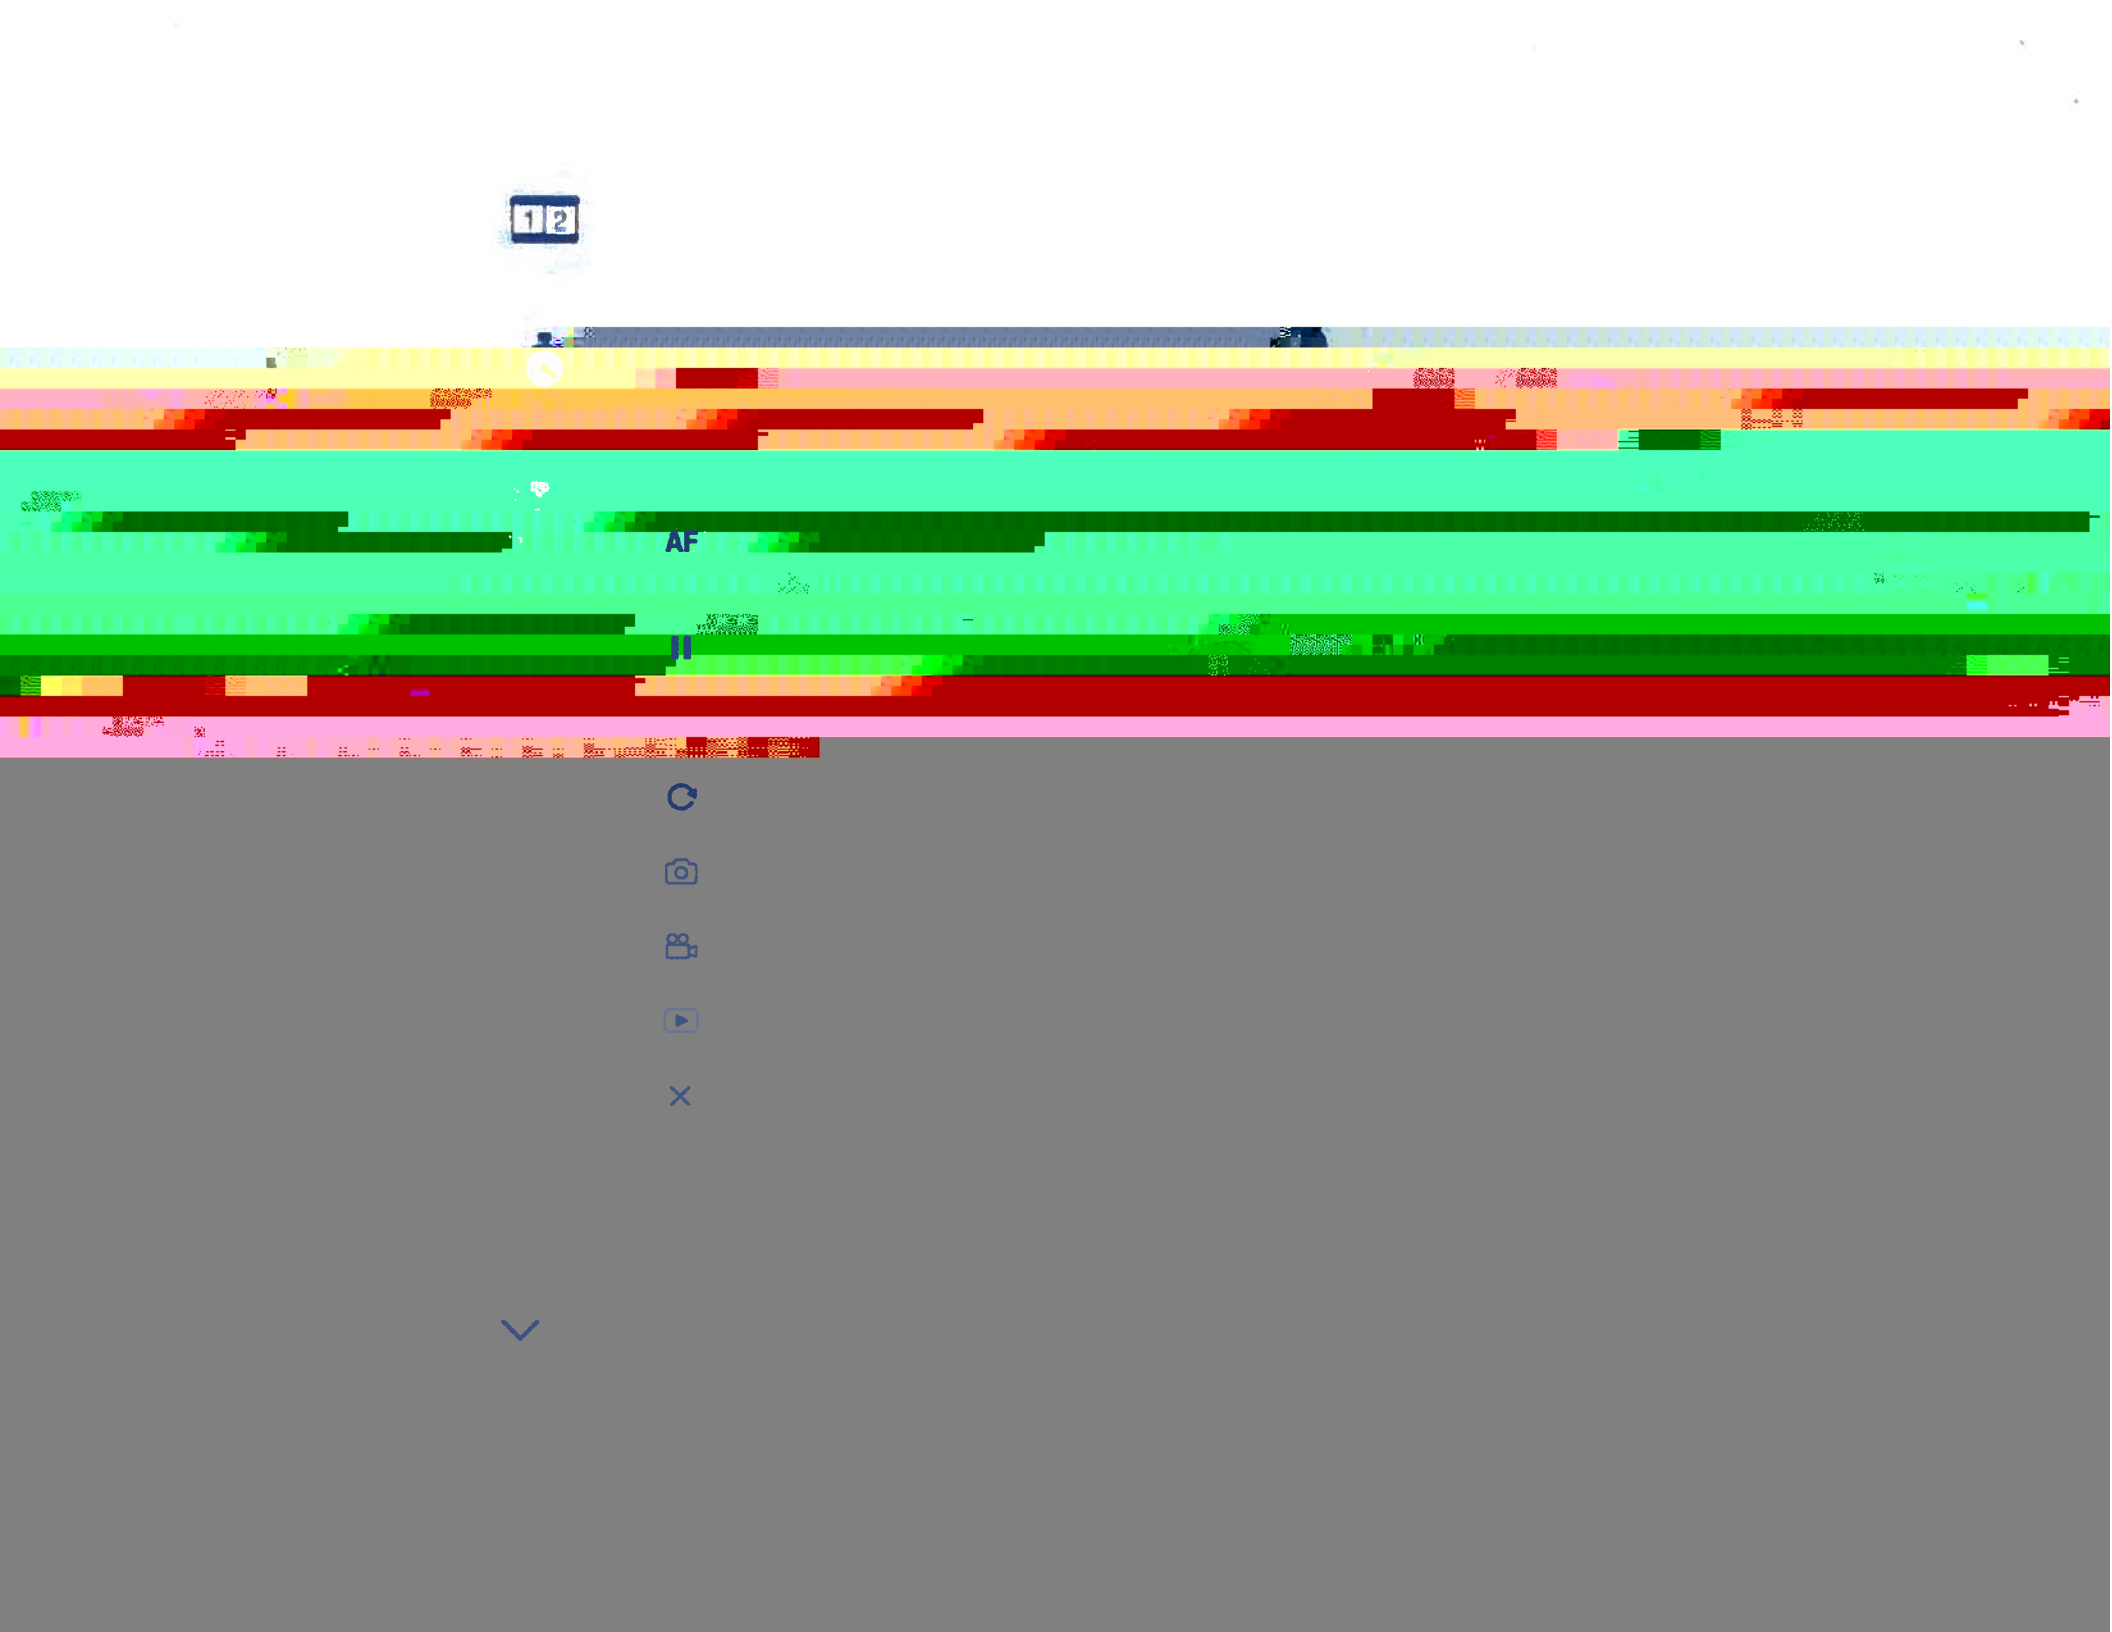
1 2
AF

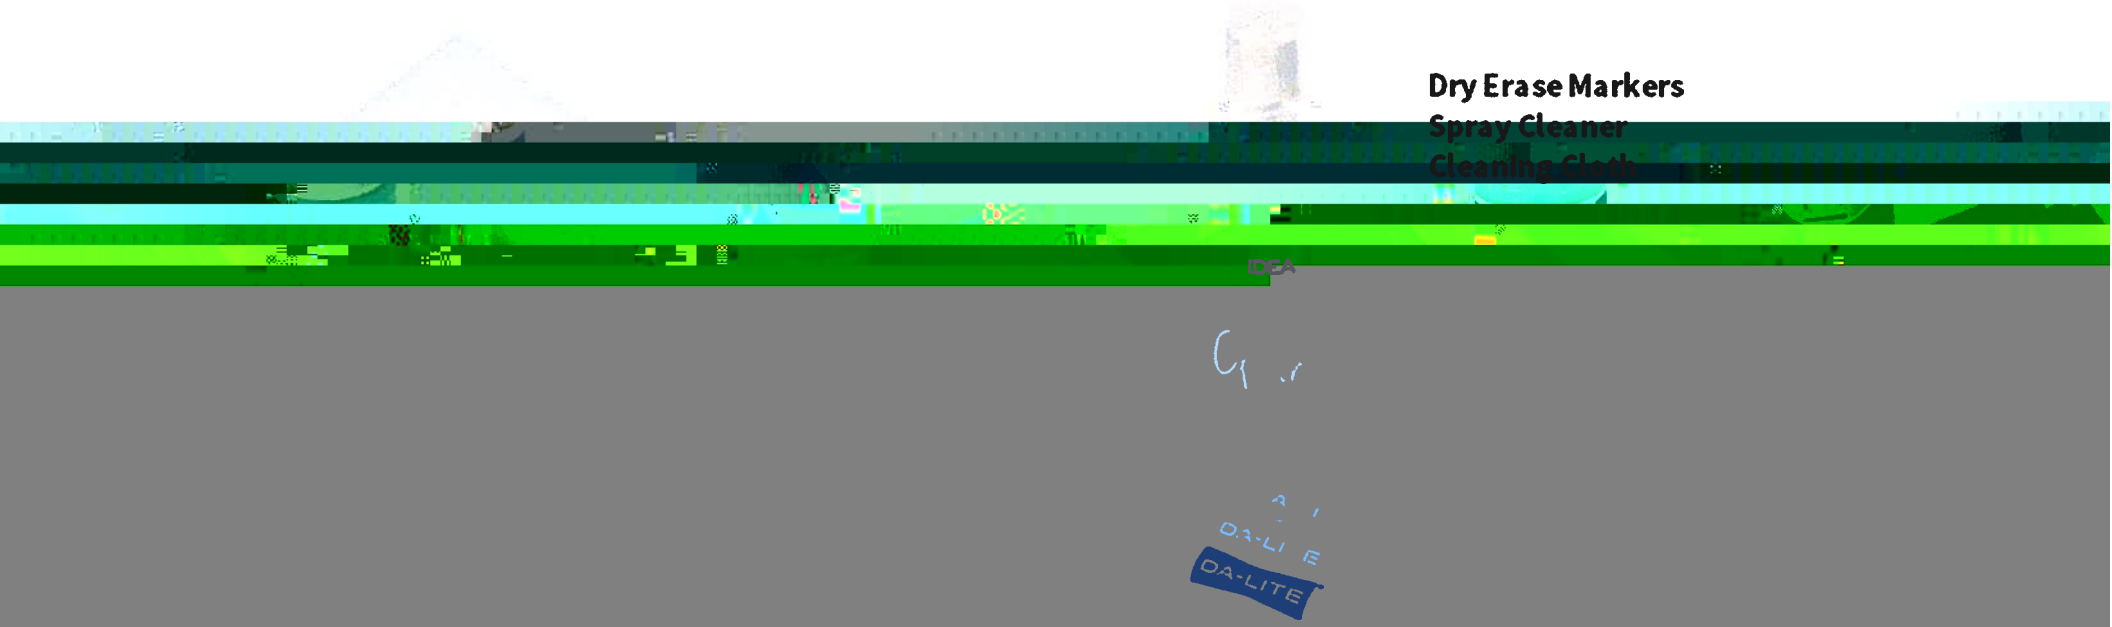
Dry Erase Markers
Spray Cleaner
Cleaning Cloth
IDEA